


# Firing Pin Safety Spring Installation XR9 Series


**Clear Firearm, Making Sure it is Completely Unloaded.**

**Wear eye protection WHENEVER working on your firearm.**

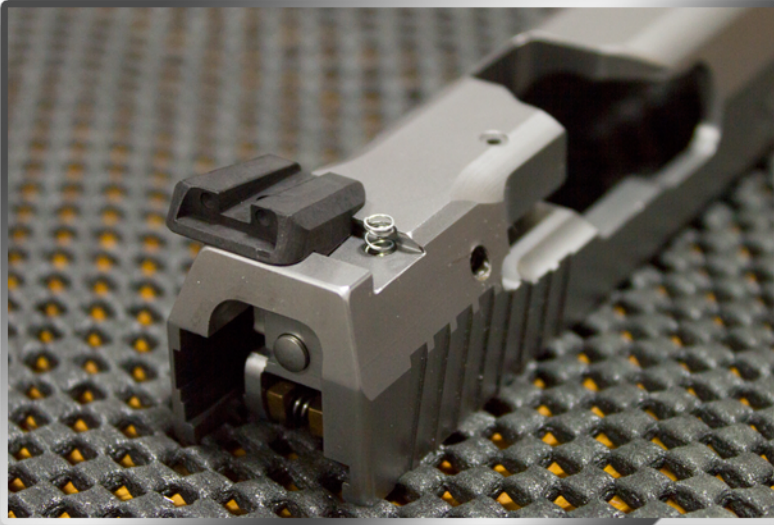


Place FP Safety Spring into the top of your slide as shown.


**You DO NOT NEED TO REMOVE SLIDE FROM FRAME TO REPLACE THE FIRING PIN SAFETY SPRING!**

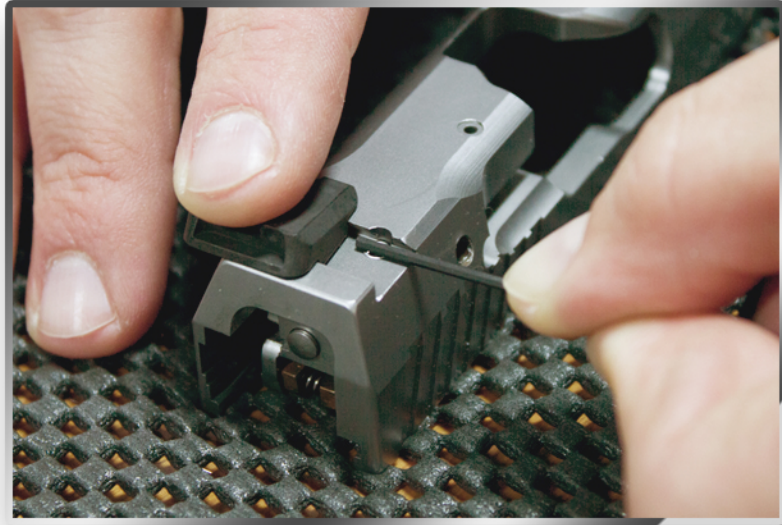

Depress the spring with an allen wrench as shown, making sure it is completely flush with the surface of the dovetail in your slide.

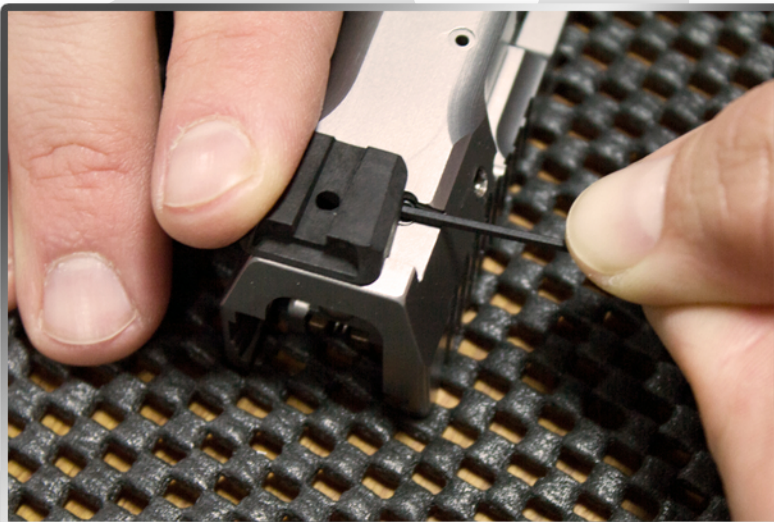

Slowly slide the rear sight into place, using the edge of the sight to push the allen wrench out of the way. The wrench will keep the spring from getting caught between the sight and the slide.

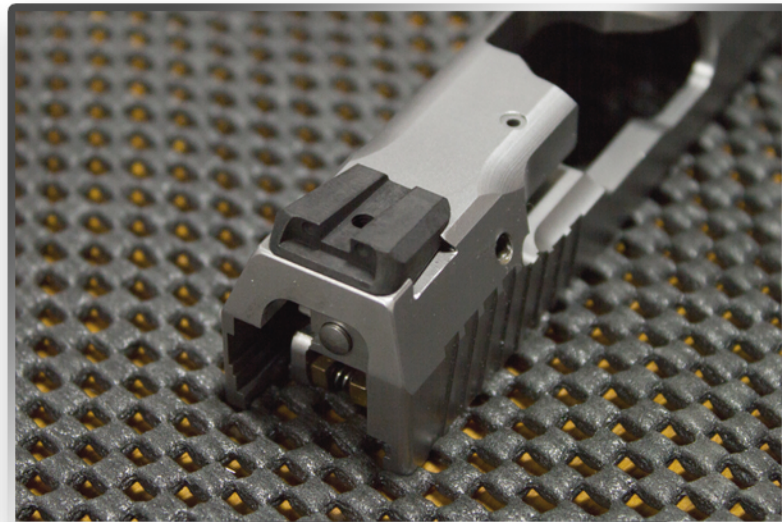

Apply loctite to the sight screw before installing and tightening.


# Firing Pin Safety Spring Installation XR9 Series

**Clear Firearm, Making Sure it is Completely Unloaded.**

**Wear eye protection WHENEVER working on your firearm.**

The staff at Boberg Arms is always happy to assist you in any way we can. Stuck somewhere in the procedure?  
Give us a call!

Repair: 651-756-7669 (Mon to Fri, 9AM - 5PM CDT)

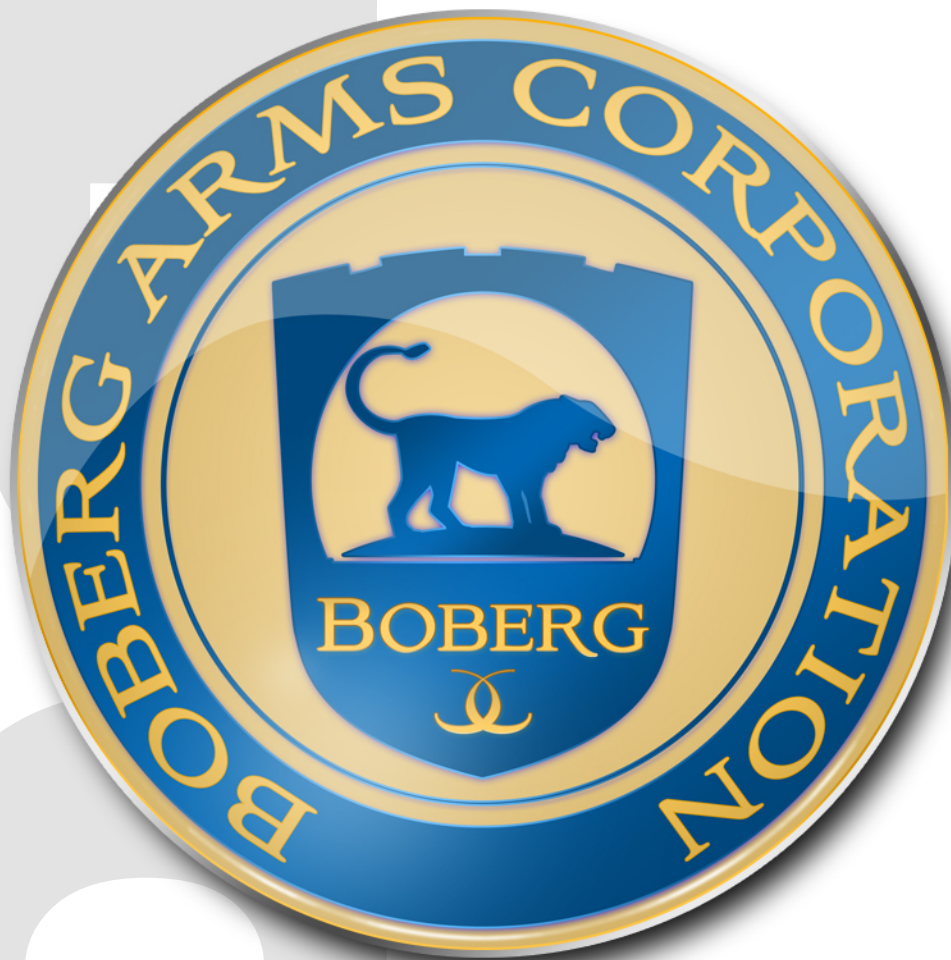

***Boberg Arms Appreciates Your Business!***