

Mainspring Installation Instructions

XR9 Series

Clear Firearm, Making Sure it is Completely Unloaded.

Wear eye protection WHENEVER working on your firearm.

Remove right grip panel using a 1.5mm hex wrench. Remove old mainspring if present.



Mainspring. Hammer assembly and frame shown for position reference.



NOTE: Orientation of "short" and "long" hooks on ends of mainspring.


1

Mainspring Installation Instructions

XR9 Series

Clear Firearm, Making Sure it is Completely Unloaded.

Wear eye protection WHENEVER working on your firearm.

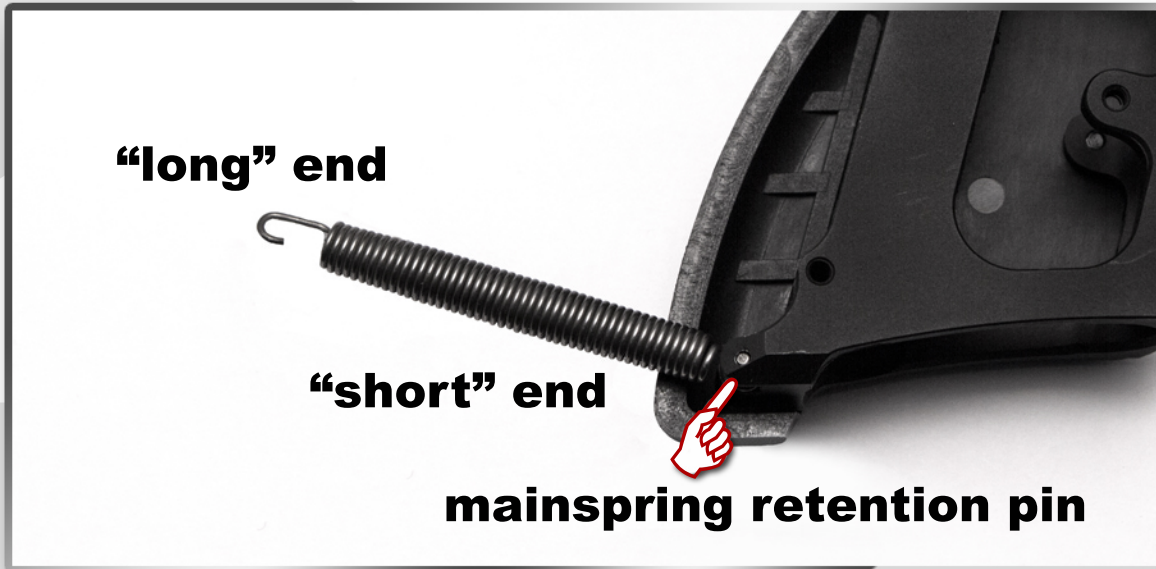

Attach "short" end of mainspring to mainspring retention pin with the "open" side of hook facing towards the back of pistol as shown.



While applying pressure to hammer, attach "long" end of mainspring to the end of anchor link that protrudes from under the back-strap of the pistol.

2

Mainspring Installation Instructions

XR9 Series

Clear Firearm, Making Sure it is Completely Unloaded.

Wear eye protection WHENEVER working on your firearm.

Replace grip. Ensure firearm is clear and test for function.

The staff at Boberg Arms is always happy to assist you in any way we can. Stuck somewhere in the procedure?

Give us a call!

Customer Service: 651-287-0617 (Mon to Fri, 9AM - 5PM CDT)



Boberg Arms Appreciates Your Business!

3