

# Mainspring Retaining Pin Installation


**Clear Firearm, Making Sure it is Completely Unloaded.**

**Wear eye protection WHENEVER working on your firearm.**

Remove both grip panels using a 1.5mm hex wrench.



You will need a non marring mallet, a permanent thread lock, the retaining pin (BAC part # BA-000-0043), a non marring rod and of course, your pistol frame.

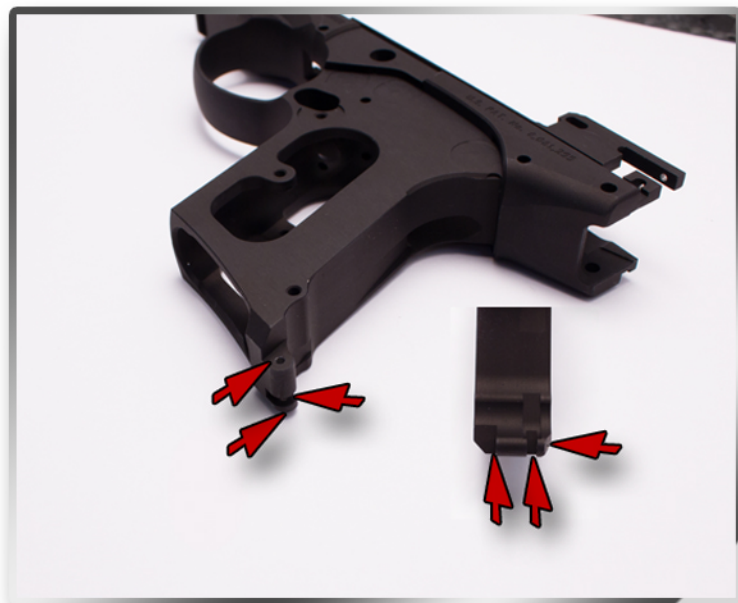

Apply your thread-lock to these points.

**1**

# Mainspring Retaining Pin Installation

**Clear Firearm, Making Sure it is Completely Unloaded.**

**Wear eye protection WHENEVER working on your firearm.**



Using a plastic rod and mallet, force pin  
**TAPERED SIDE DOWN**, into hole in frame.



Retaining pin should be flush with  
frame. Evidence of thread-lock should  
be visible on both ends of pin!

The staff at Boberg Arms is always happy to assist you in  
any way we can. Stuck somewhere in the procedure?  
Give us a call!

**Customer Service: 651-287-0617 (Mon to Fri, 9AM - 5PM CDT)**



***Boberg Arms Appreciates Your Business!***

**2**